





Душевая кабина



BETT B821


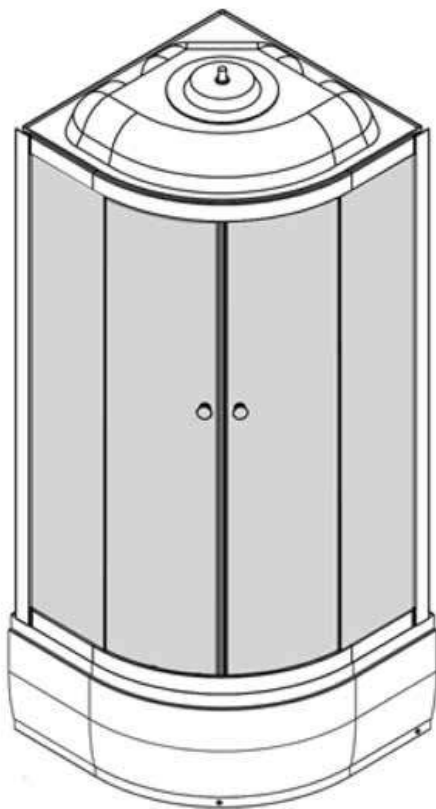





A1 X2	A2 X1	A3 X1	A4 X2	A5 X4
A6 X8	A7 X1	A8 X2	A9 X8	A10 X4
A11 X2	A12 X2	A13 X1	A14 X1	A15 X1
A16 X1	A17 X1	A18 2.0 X2	A19 X1	A20 X2
A21 1.0 X2	A22 X2	A23 X1	A24 X4	ST4X14=20 M4X25=2 ST4X20=8 ST4X12=16 ST4X10=4

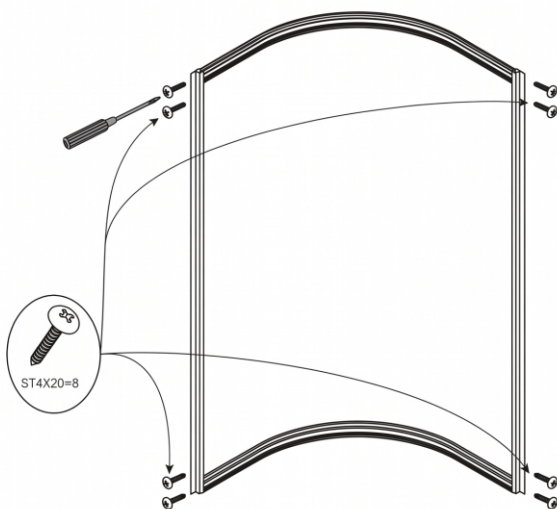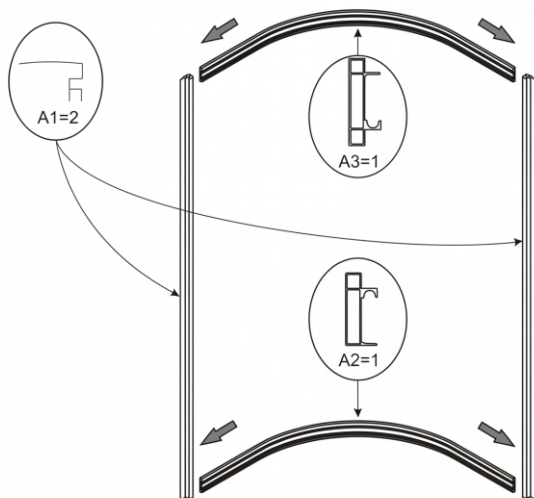


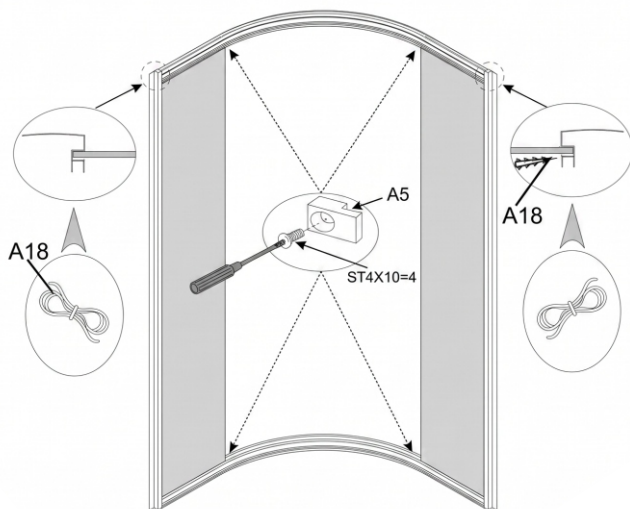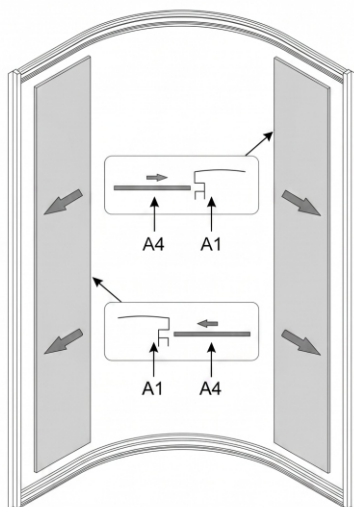

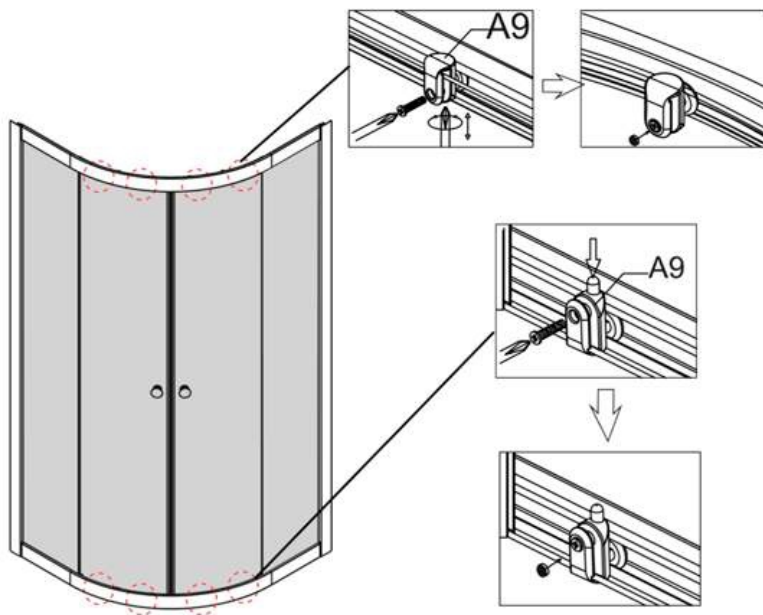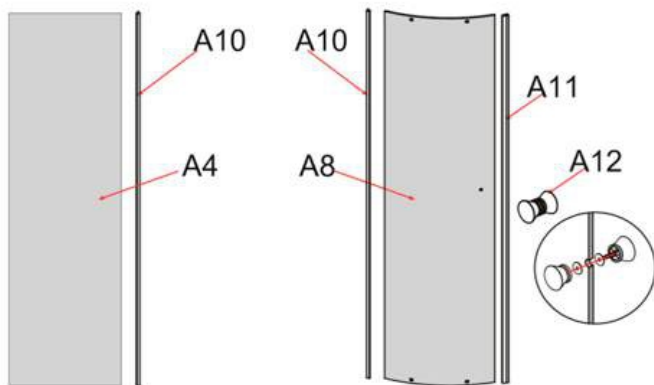


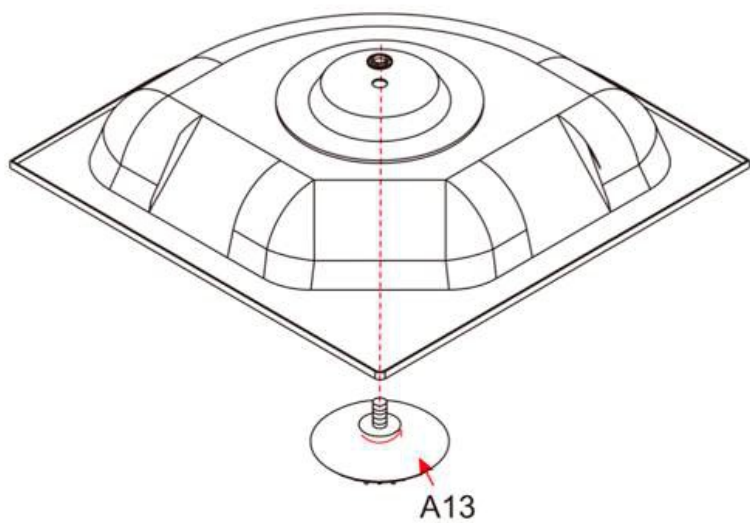


A

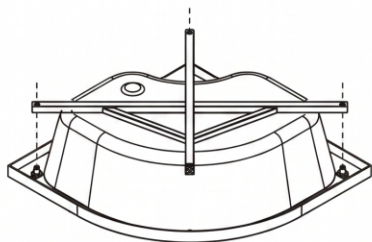


B

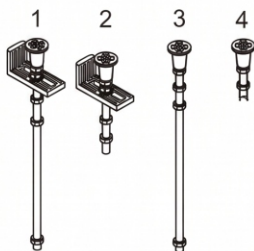


C

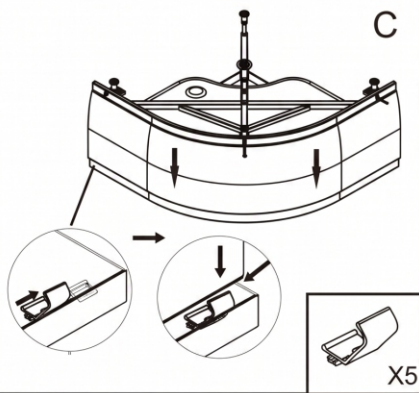

D

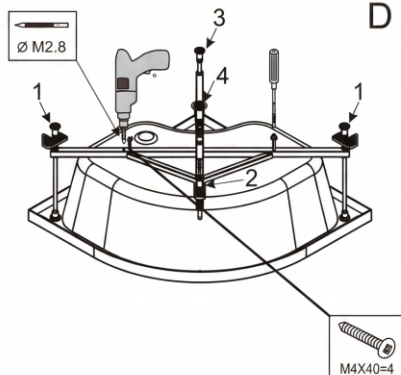

E

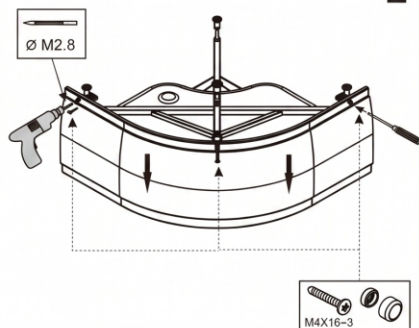

F

