









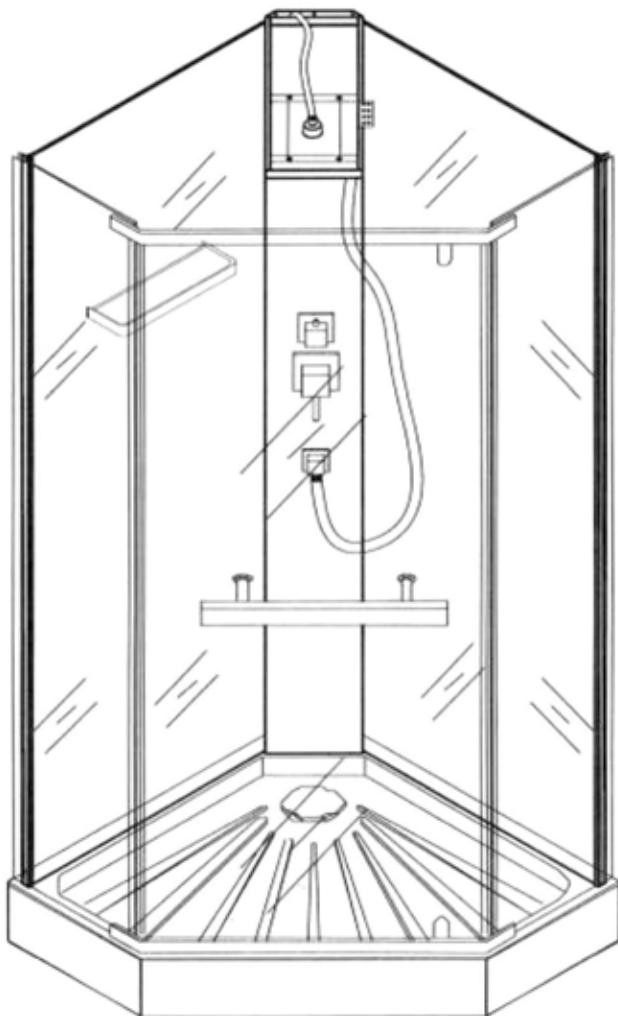
























Душевая кабина
СНІКА901В






1  X1	2  X1	3  X2	4  X2	5  X1
6  X1	7  Ø2.8 X1	8  X1	9  X1	10  X1
11  X1	12  X2	13  X1	14  X1	15  X1
16  X1	17  X1	18  X1	19  X1	20  X1
21  X1	22  X1	23  X1	24  X2	25  X2
26  X2	27  M4*20 X4	28  ST4*16 X18	29  ST4*10 X10	30  X10

step1:

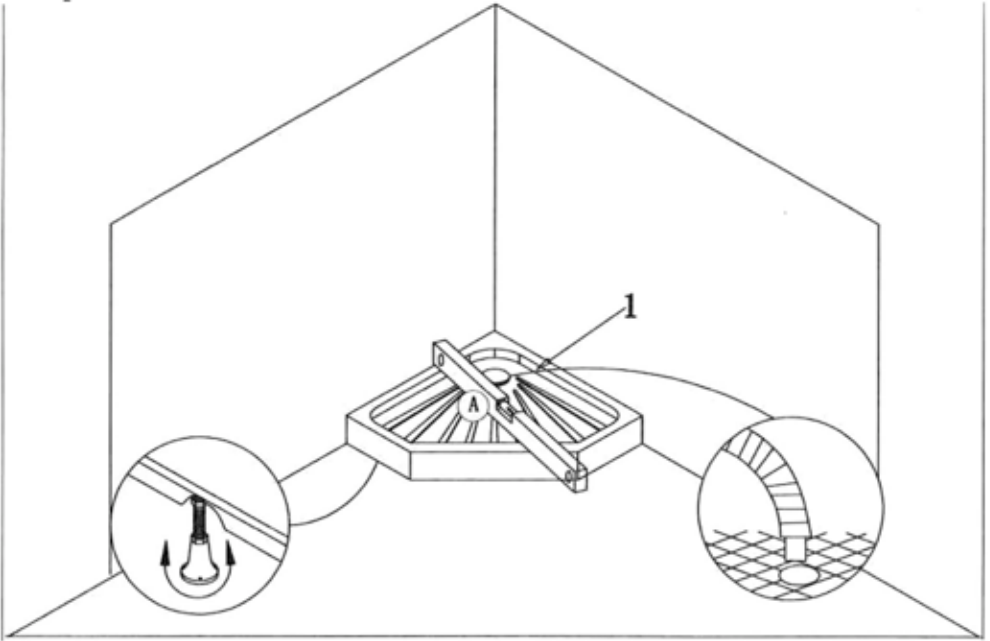


step2:

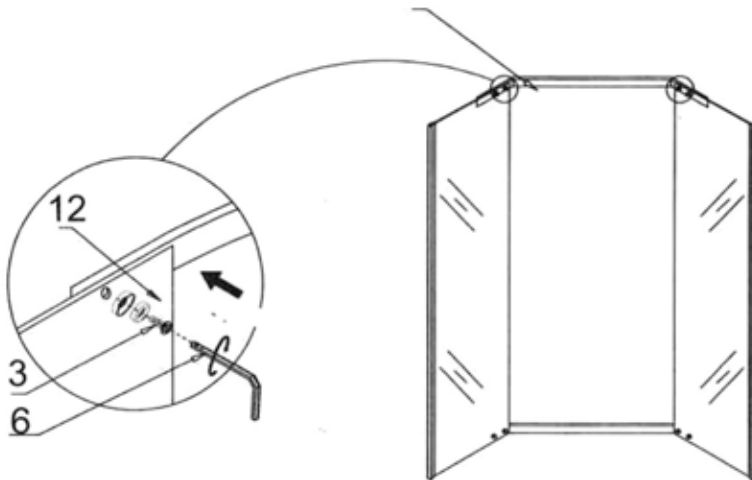


3

②


step3:

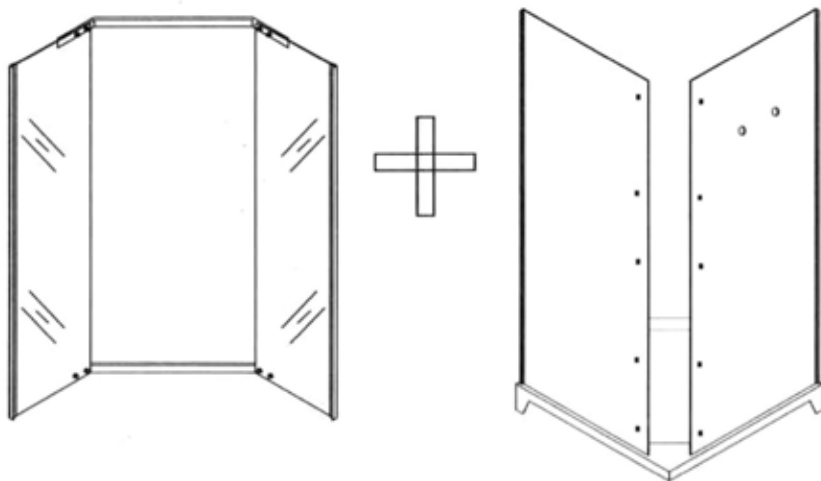


step4:

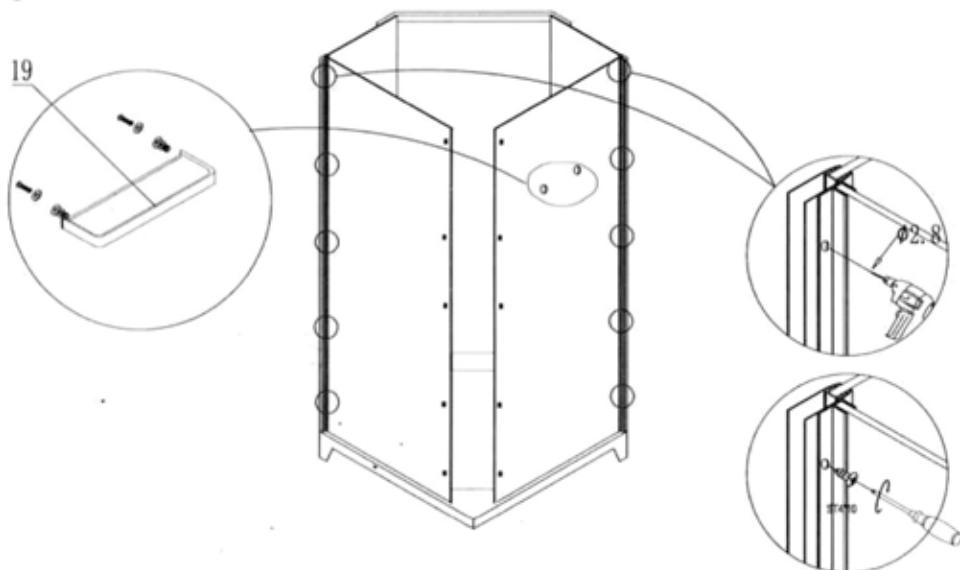


step:5

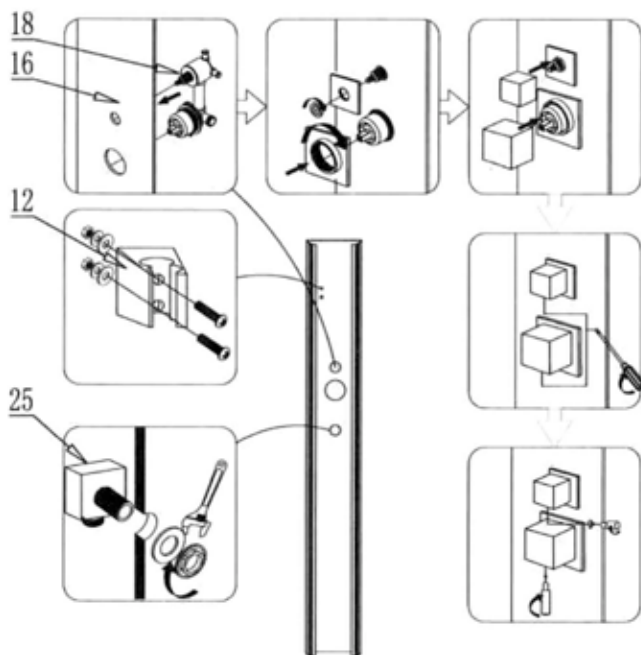


step6:

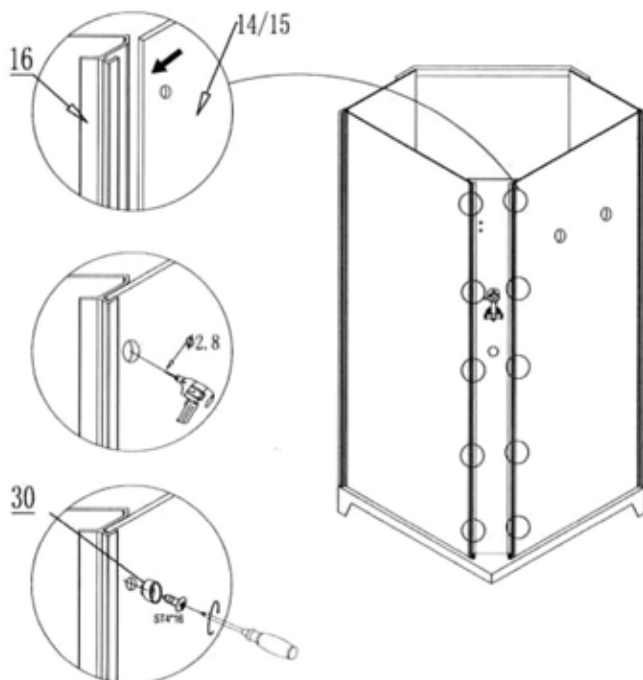


step7:

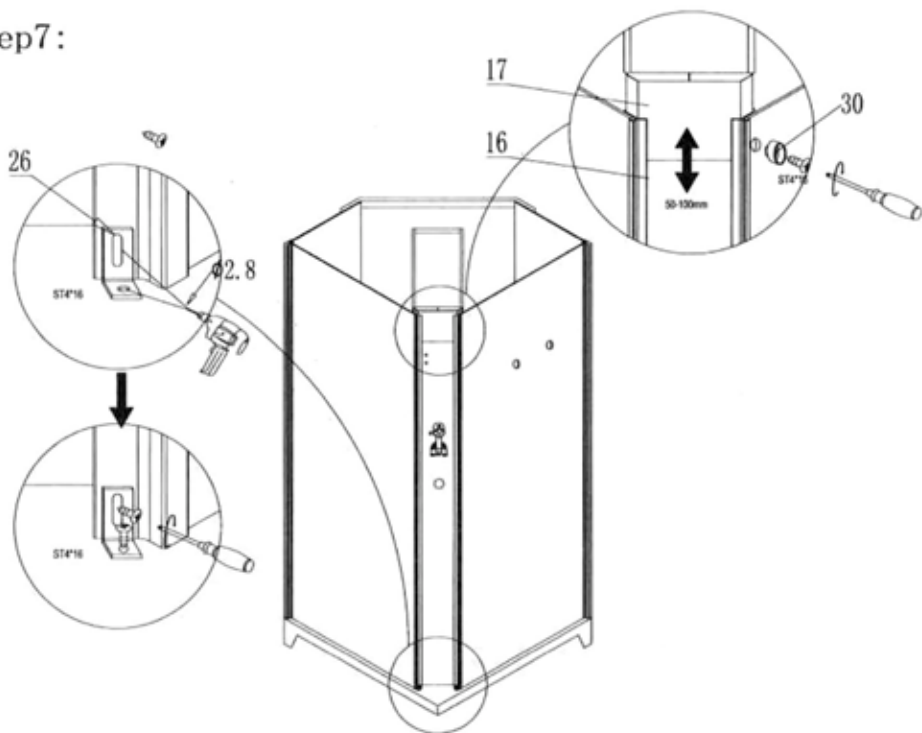


step8:

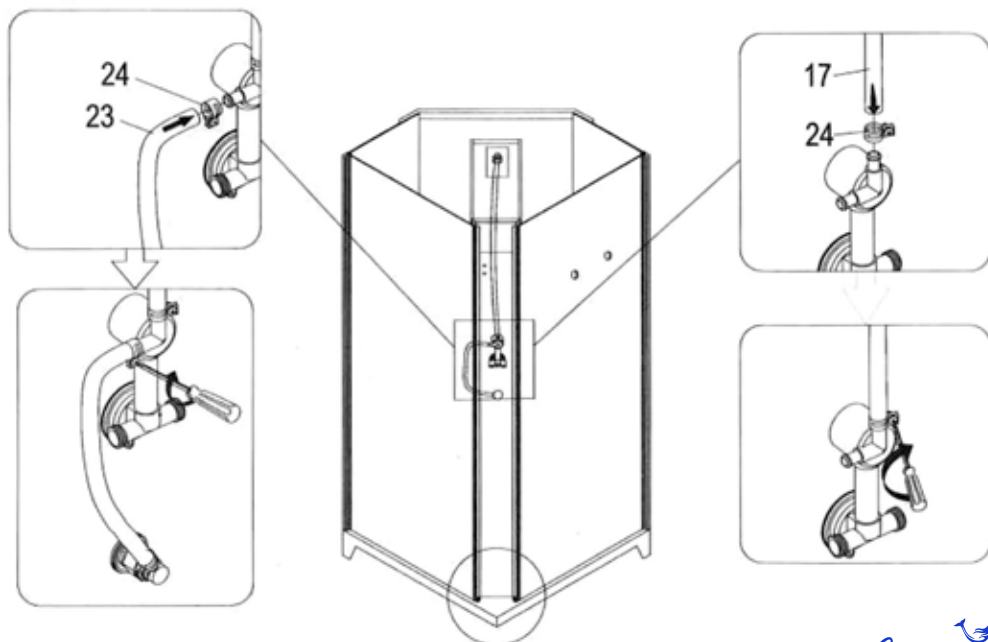


step9:

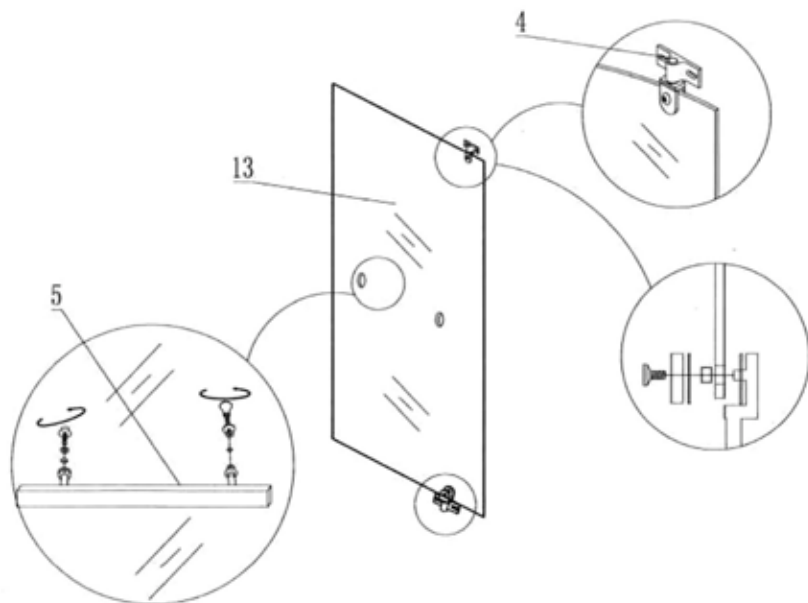

step10:

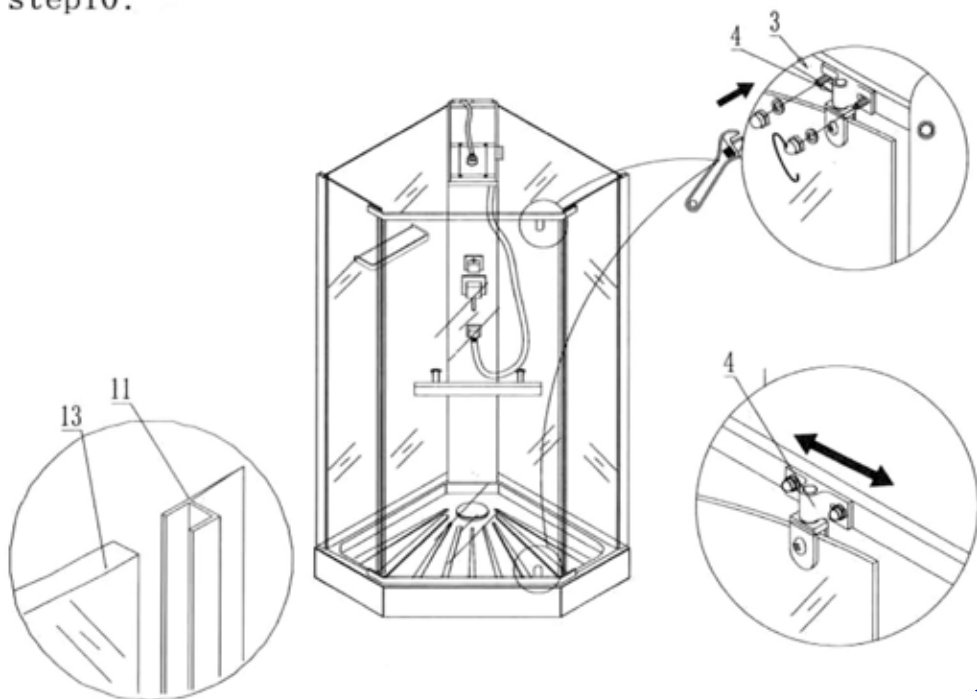

step11:

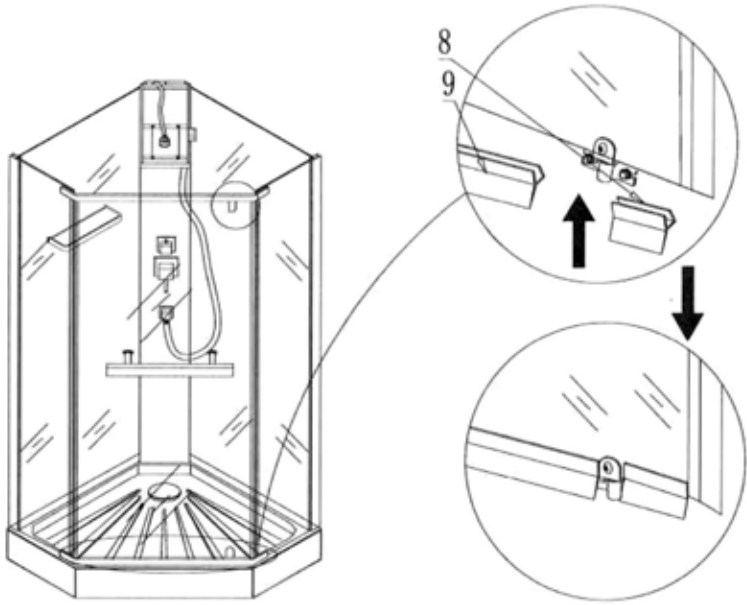

step12:

