


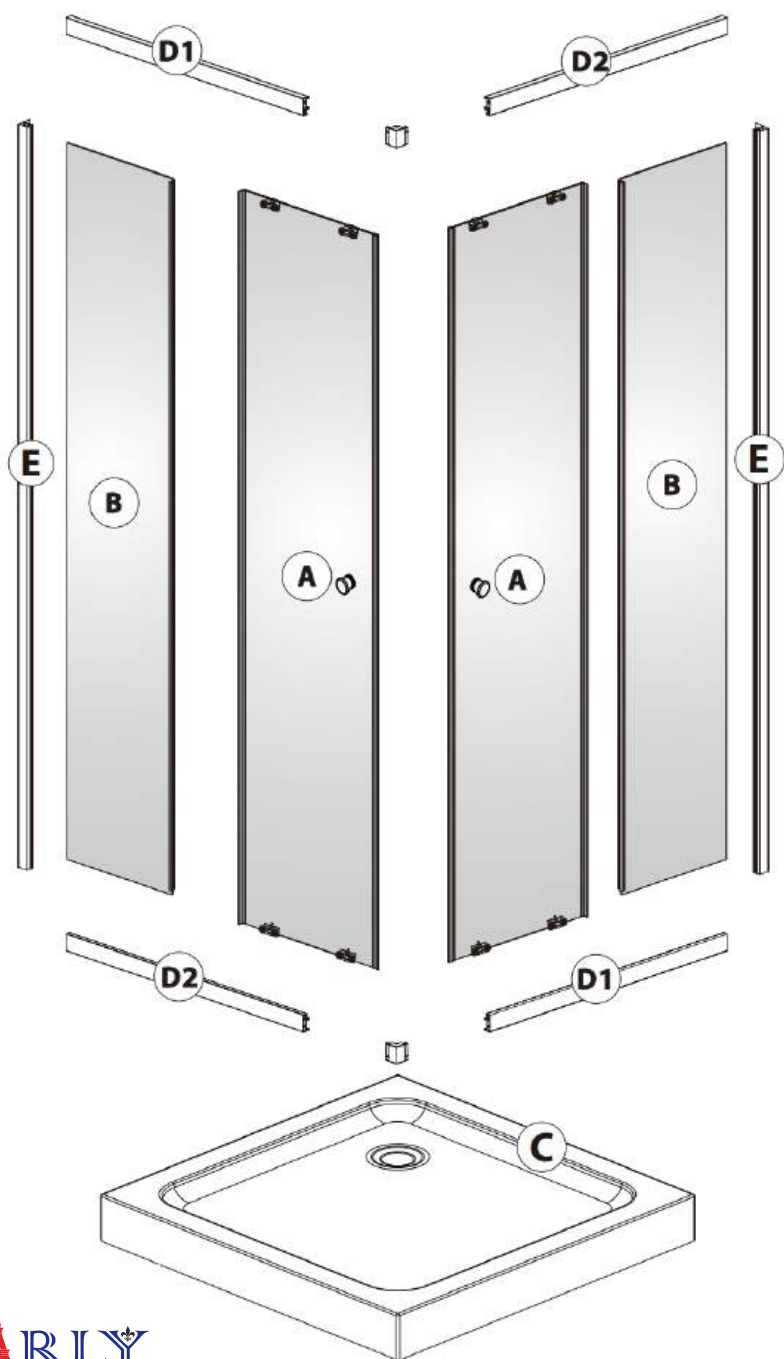

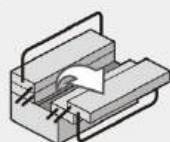
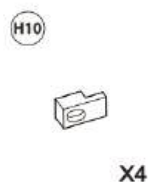
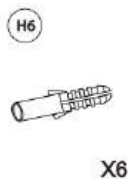



Душевой уголок с поддоном

ZEQ911BN





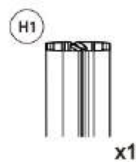

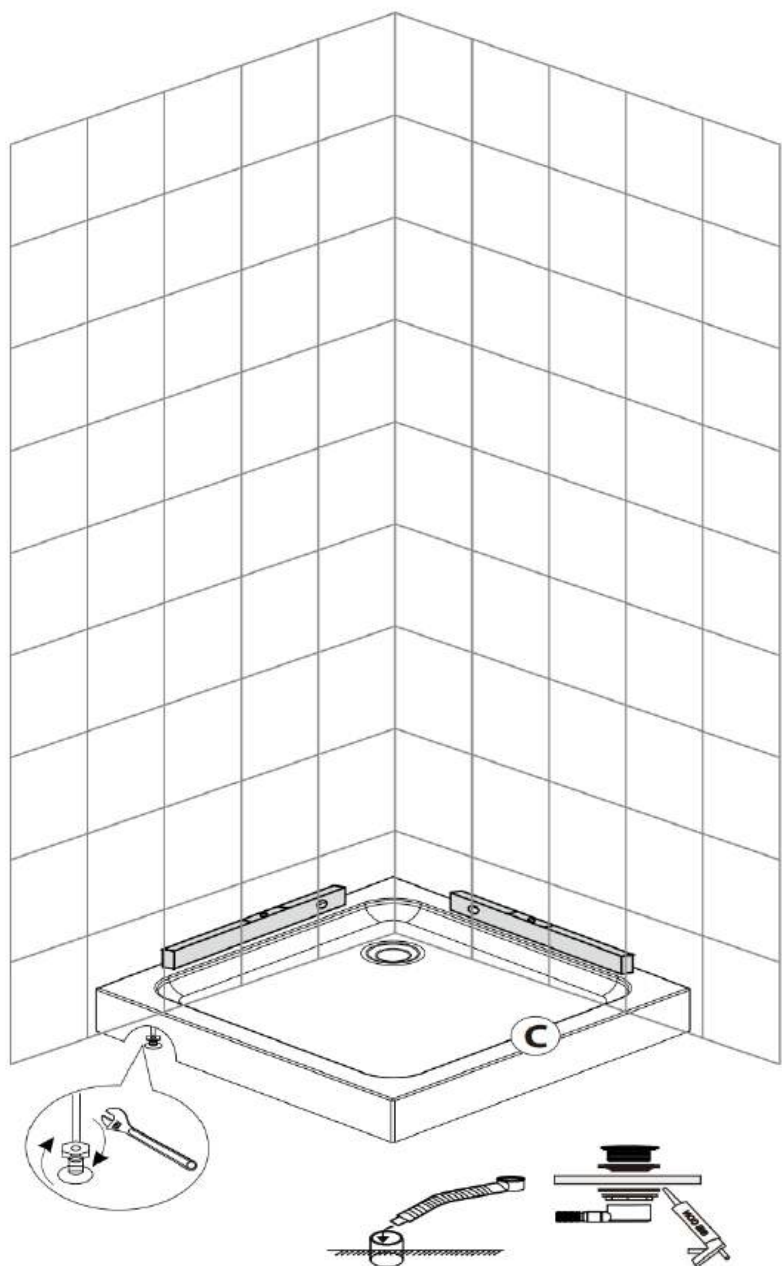

• PH2

H12



X8

H8



ST4X12







X8

H7








ST4X16




X8

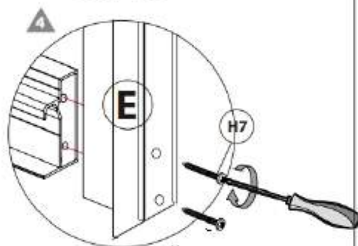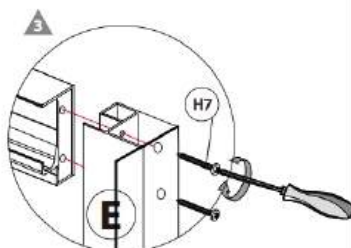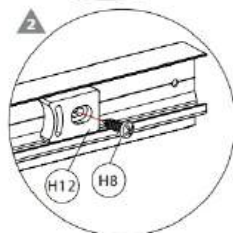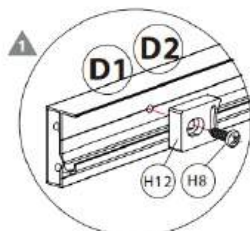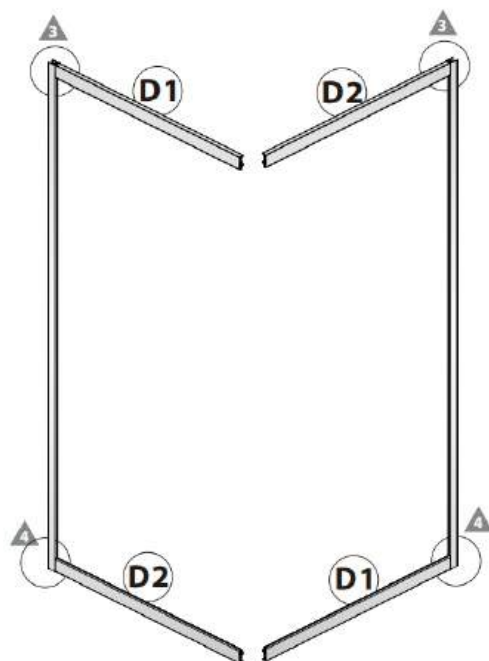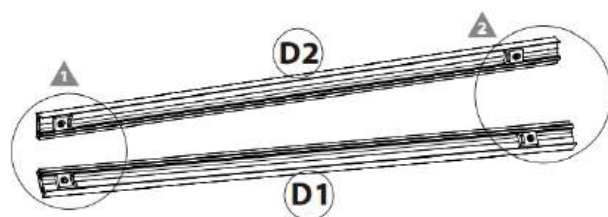

PARLY

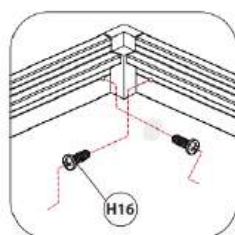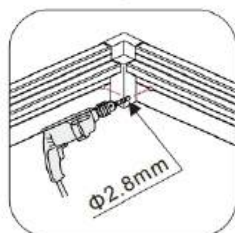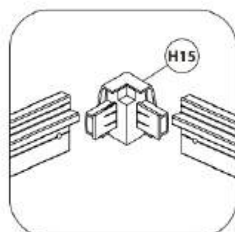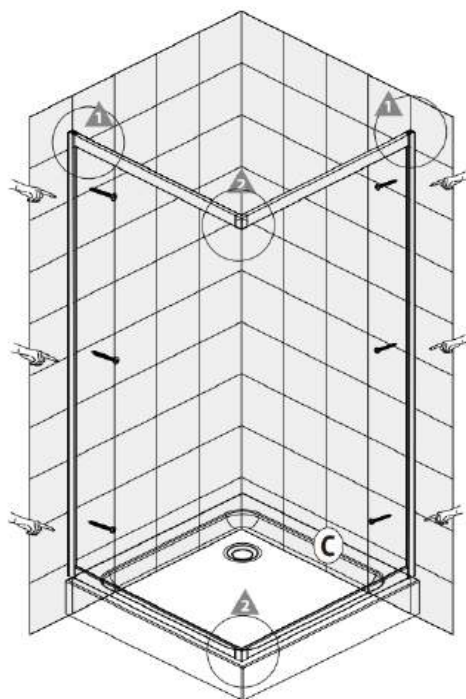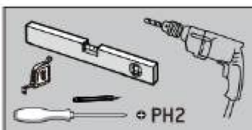

1

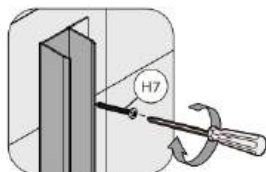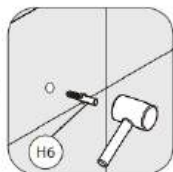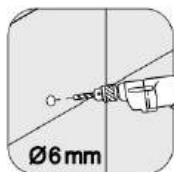

• PH2

(H10)



X4

(H5)



X4

(H4)




X2









(H3)








X2

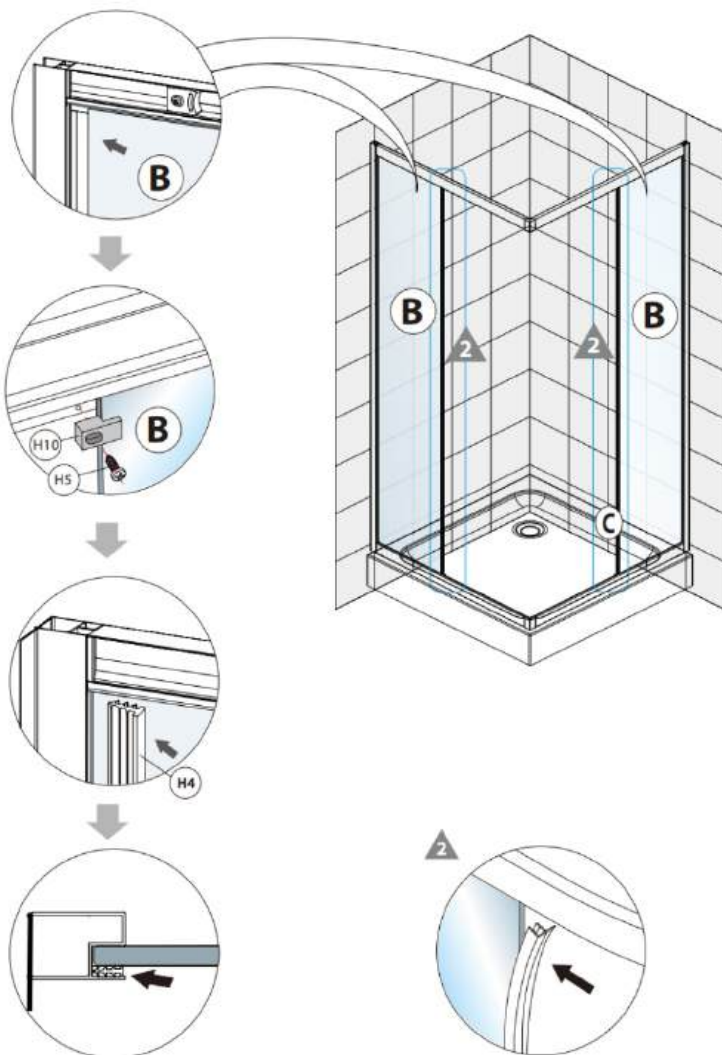

•PH2

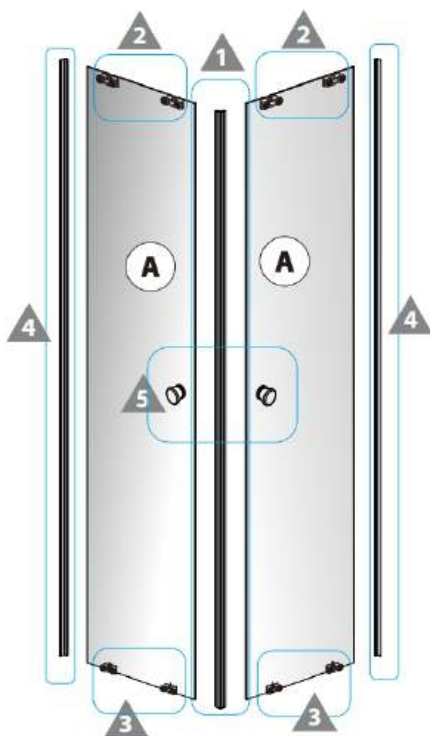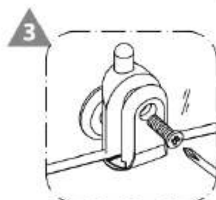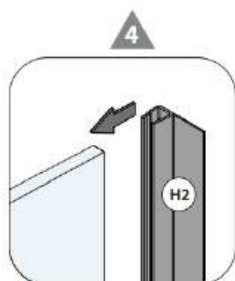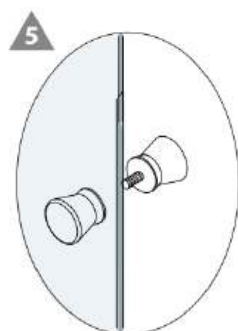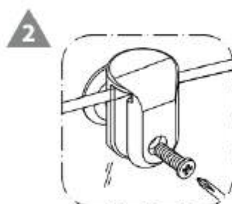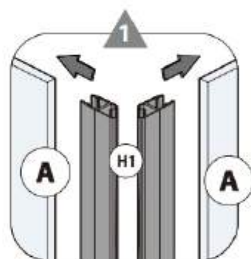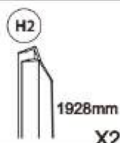

PH2

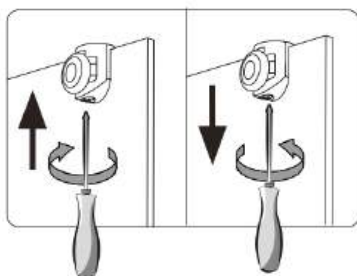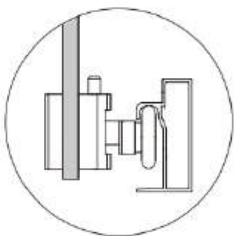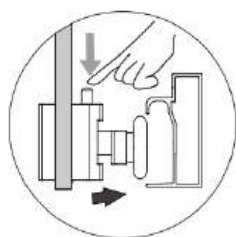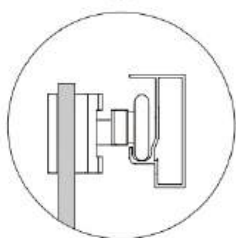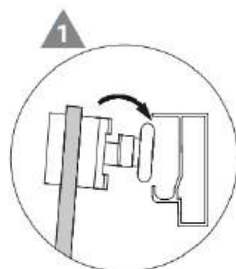

PARLY

